WEBENCH® Altium Connector User's Manual

SZZU007 Version: 1.4

Sept 16, 2014

WEBENCH Design Center

© Copyright 2013-2014 Texas Instruments Incorporated

Contents

Introduction 3
Menus and Toolbar 4
WEBENCH® Altium Connector Menus and Toolbar 4
Using WEBENCH Simulation Engine 7
Installing License for WEBENCH® Simulation Engine: 7
Running WEBENCH® Simulation Engine: 12
WBSE Model Encryption: 13
Support 13
WEBENCH® Simulation Engine Reference Guide 18

Introduction

WEBENCH® Design Environments from Texas Instruments are unique and powerful software tools that deliver customized power, lighting, filtering, clocking and sensing designs in seconds. These easy-to-use tools help you generate, optimize and simulate designs that conform to your unique specifications. They allow you to make value-based tradeoffs at a design, system and supply chain level before your design is committed to production.

WEBENCH® Altium Connector is an interface to online WEBENCH® Design Center as well as offline WEBENCH Simulation Engine (WBSE). You can access WEBENCH® from Altium Designer using this extension and optimize your design. You can export that design from WEBENCH to Altium and then simulate offline in Altium. You can simulate any circuit using fast WEBENCH Simulation Engine integrated in Altium.

This manual will take you through the steps on how to use WEBENCH® Altium Connector.

Menus and Toolbar

WEBENCH® Altium Connector Menus and Toolbar

- A new WEBENCH® menu in menubar will appear.

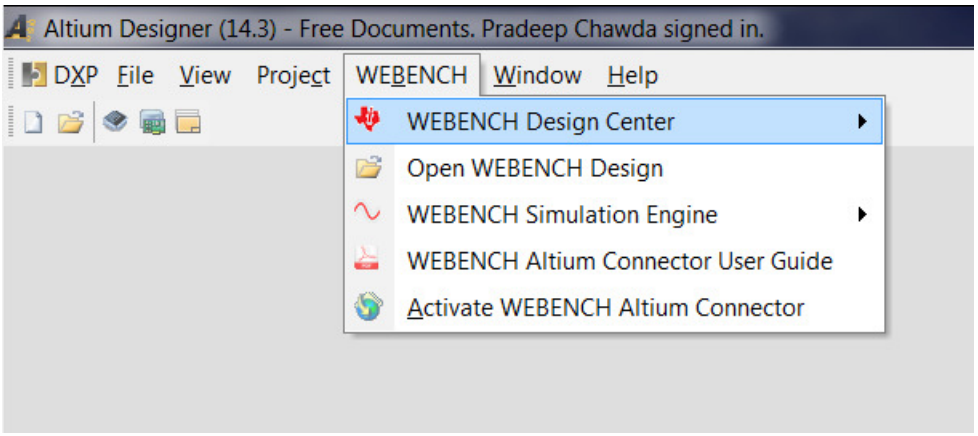
Altium Designer (14.3) - Free Documents. Pradeep Chawda signed in.
DXP File View Project WEBENCH Window Help
WEBENCH Design Center
Open WEBENCH Design
WEBENCH Simulation Engine
WEBENCH Altium Connector User Guide
Activate WEBENCH Altium Connector

- You can click on any of the WEBENCH Design Tools to launch it from Altium. (e.g. WEBENCH Power Designer). You can choose whether you want to use the Altium inbuilt browser or external browser. You can go to **DXP->Preferences->Simulation->WEBENCH Simulation Engine** and select **Open WEBENCH links in external browser**.

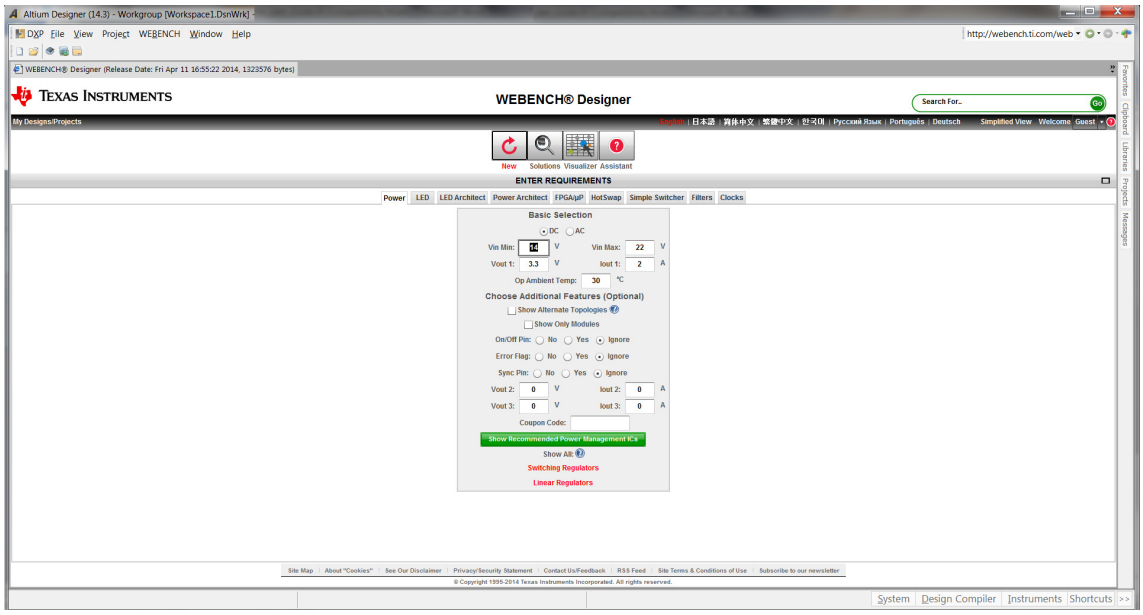

Note: If the close browser page by right clicking doesnot work, use File->Close.

- WEBENCH® Simulation Engine Menus
  - Netlist for the project

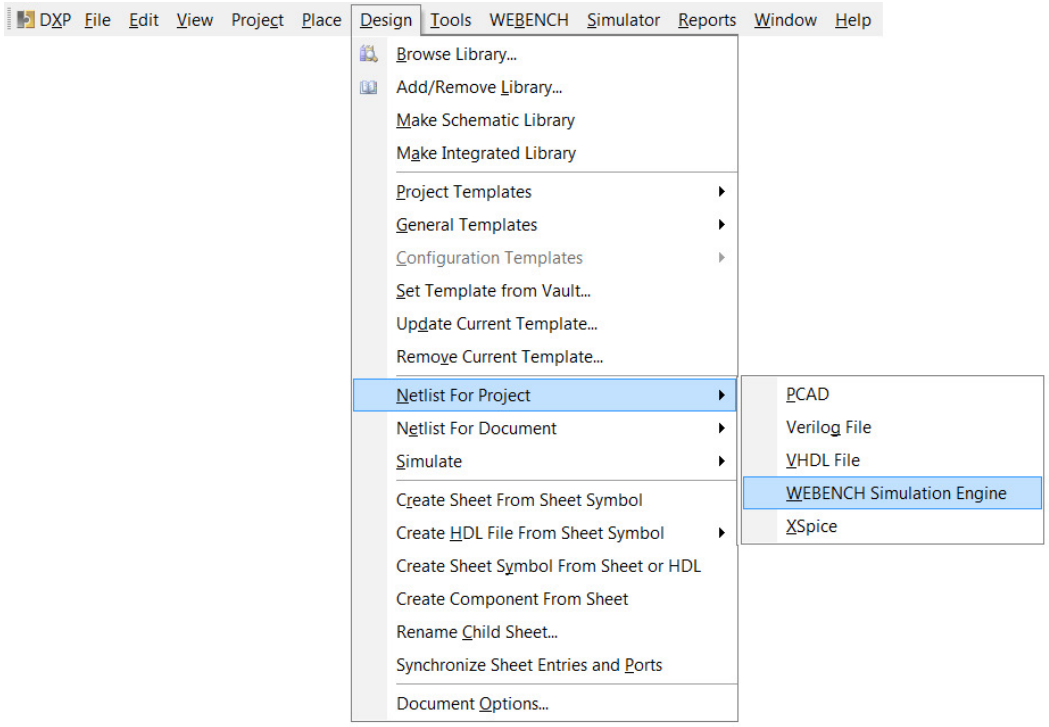

- Netlist for the document

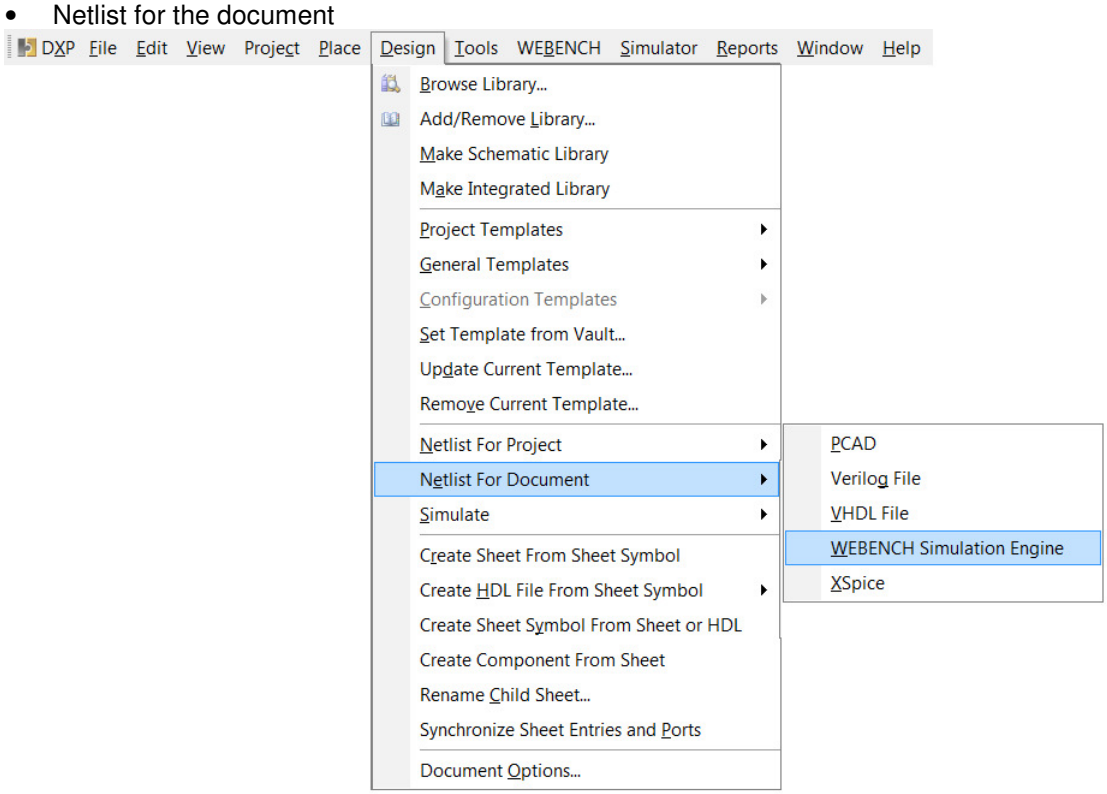

- Simulate

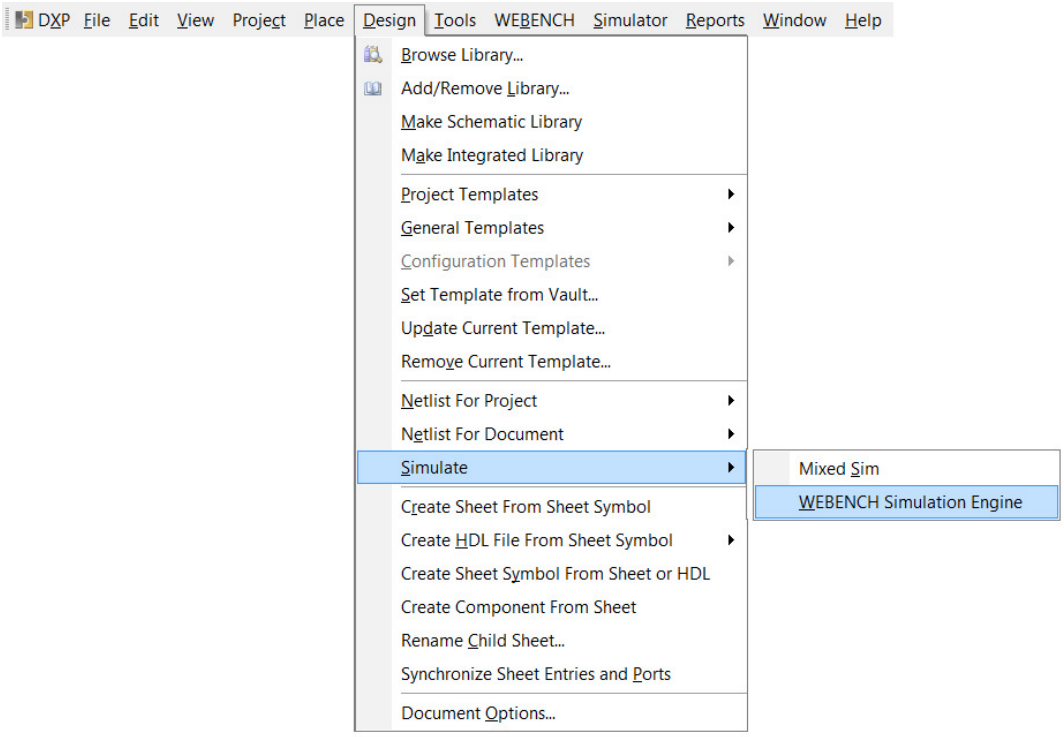

- WBSE Analyses Setup

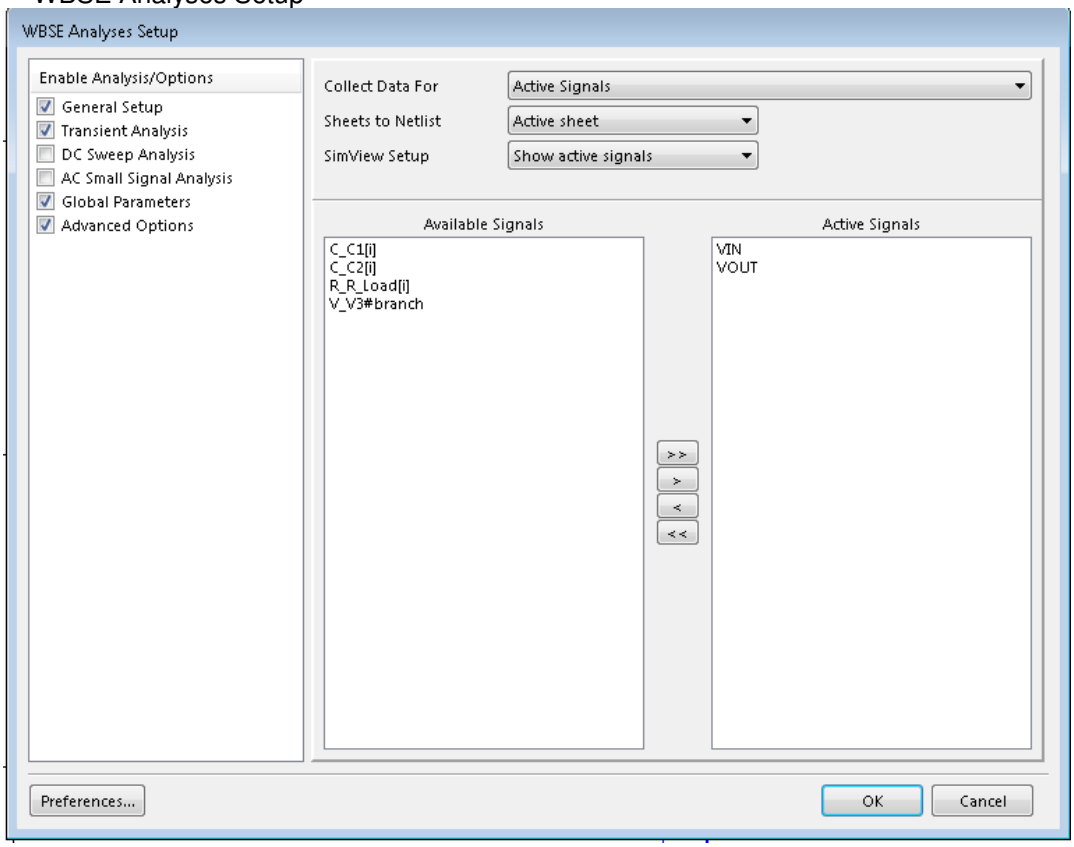

- **WEBENCH® Simulation Engine Toolbar** 
    - Mapping of toolbar icons to the function is shown in below figure.

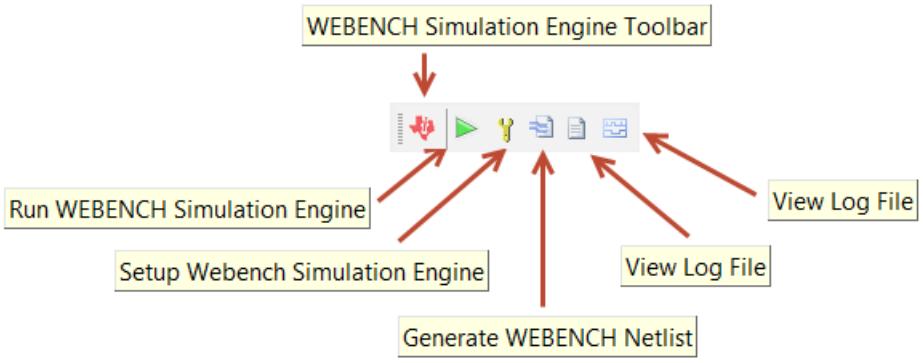

Using WEBENCH Simulation Engine

Installing License for WEBENCH® Simulation Engine by Activating WEBENCH Altium Connector:

- Click on WEBENCH->Activate WEBENCH Altium Connector.

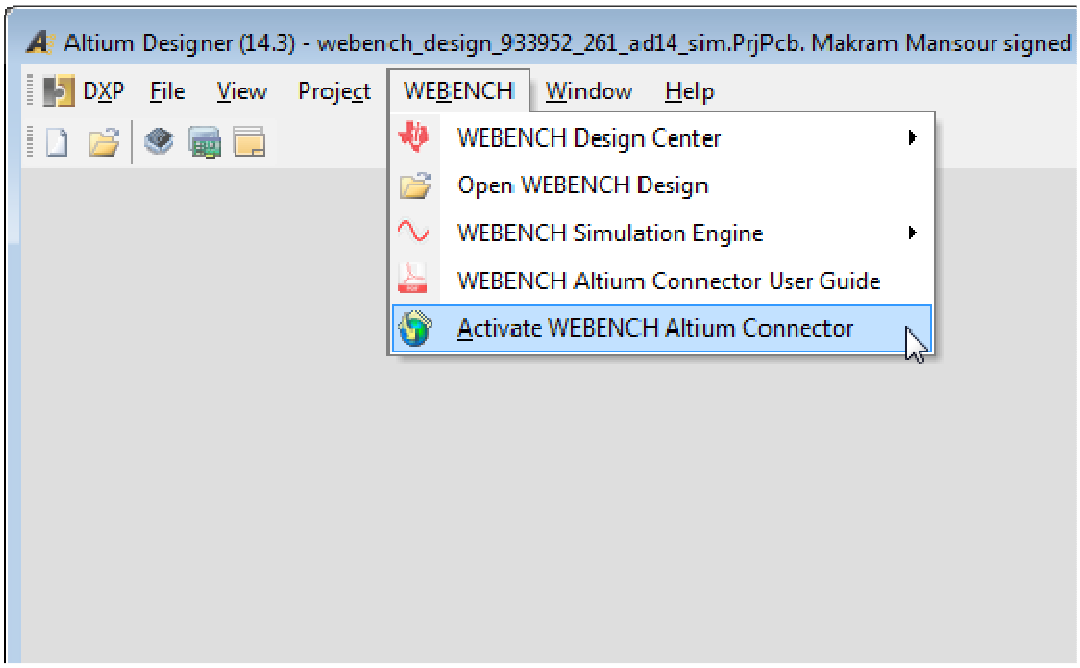

- It will take you to the user login page. User you my.TI login. If you don't have you can create one by registering.

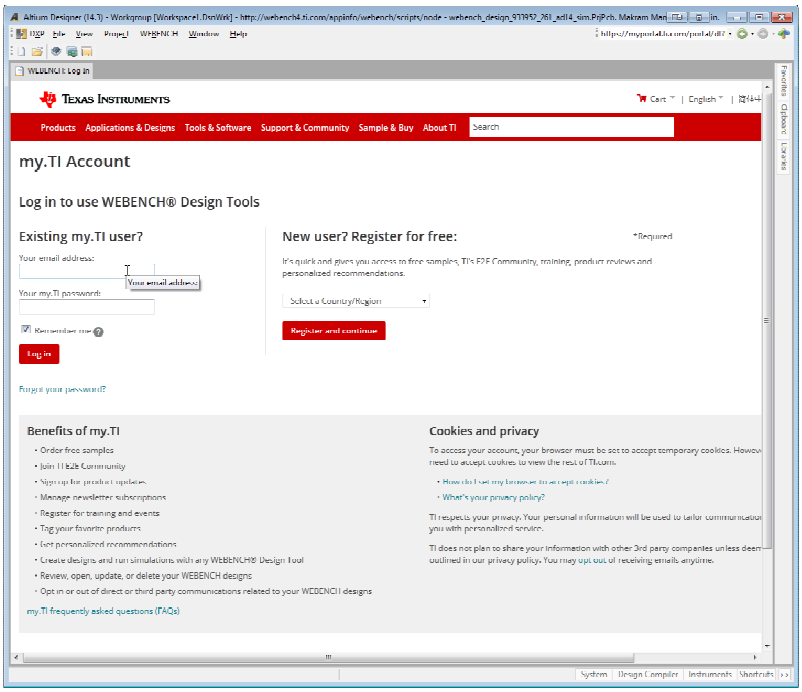

- Login using your my.TI account.

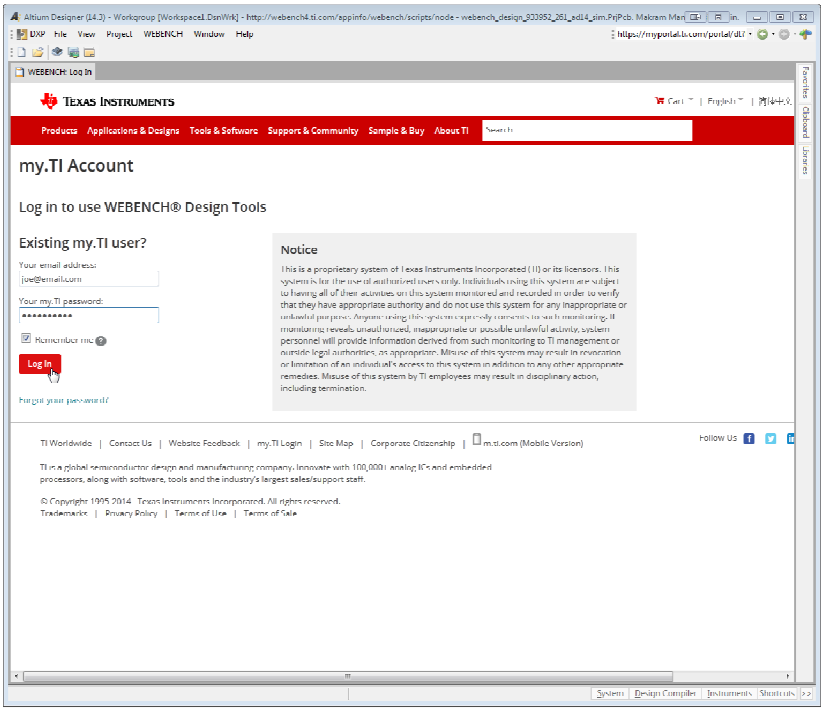

- Upon login you will see a webpage with Activation Code. Select and copy the activation code.

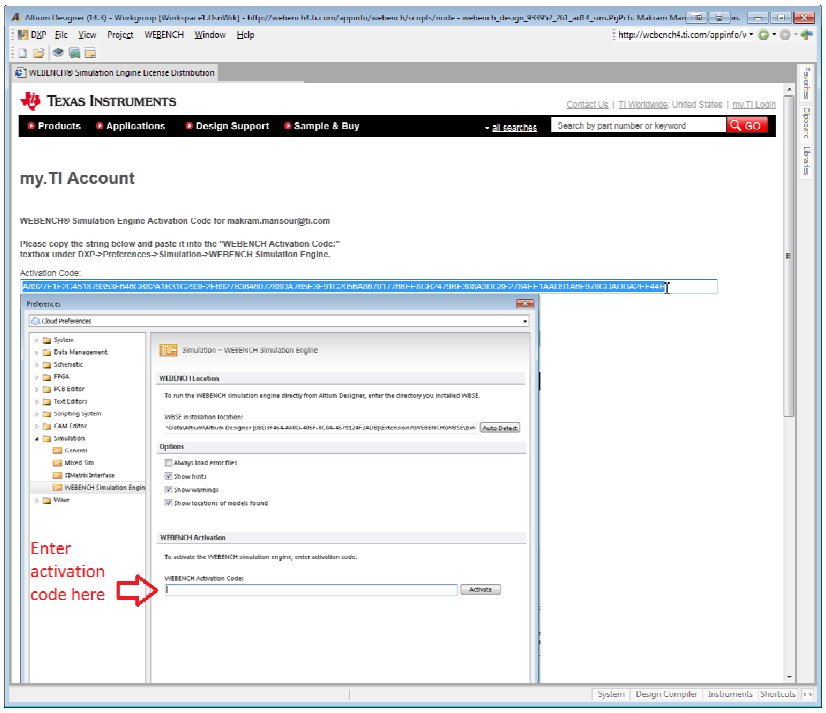

- Open DXP and select Preferences.

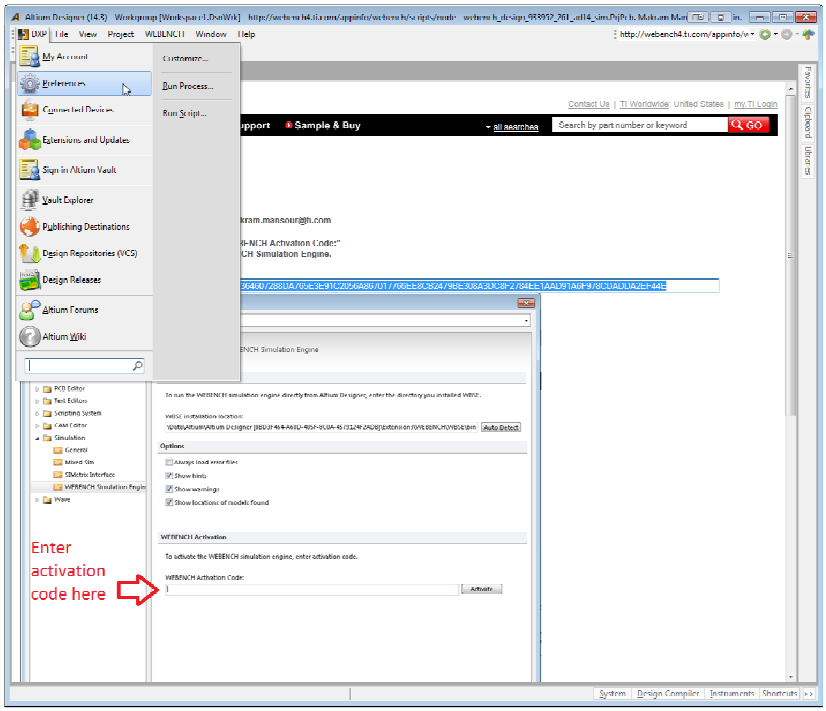

- Next Click on Simulation

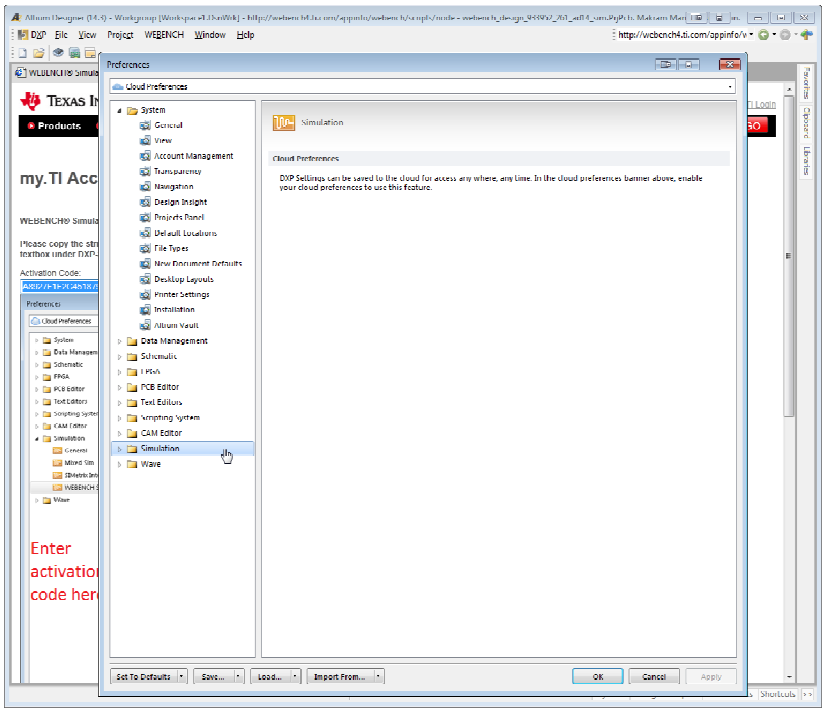

- Now select the WEBENCH Simulation Engine.

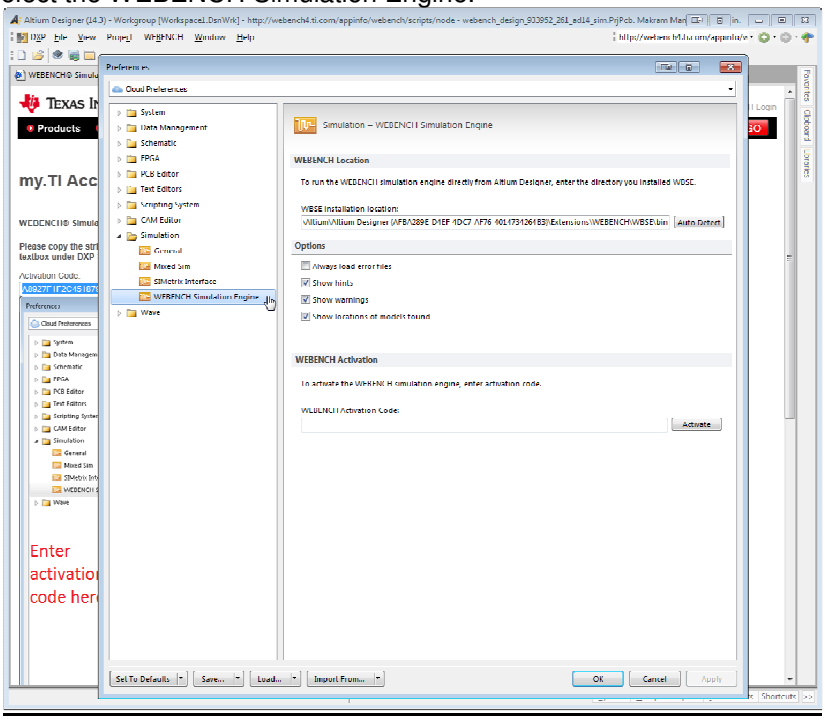

- Next press Ctrl + V to paste the activation code and press activate.

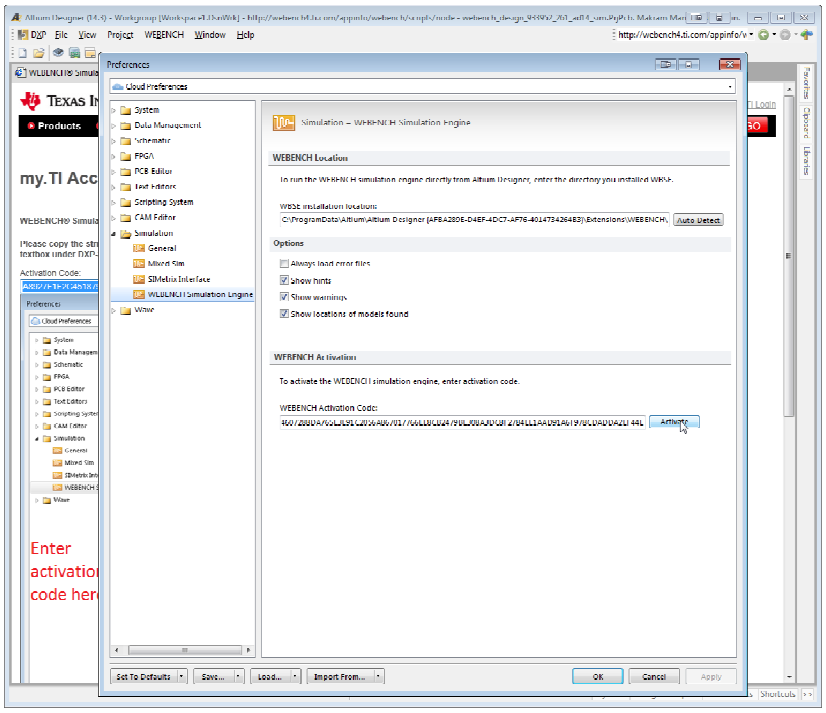

- Upon successful activation you will see that activation code is accepted.

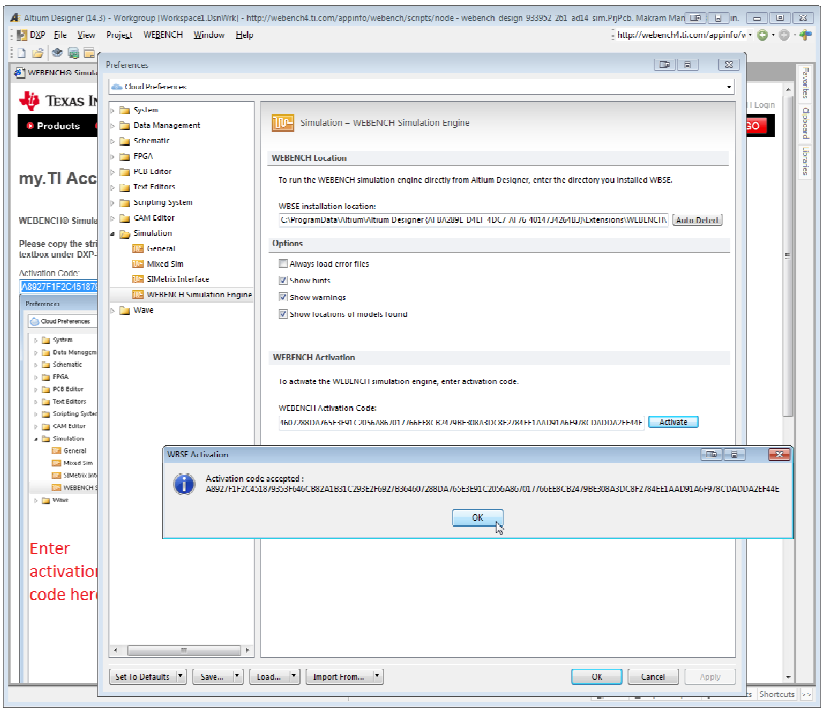

- You are ready to use the WEBENCH® Simulation Engine.

Running WEBENCH® Simulation Engine:

1. To simulate a design in WEBENCH® Simulation Engine, go to **Design -> Simulate -> WEBENCH Simulation Engine** or you click on 'Run' toolbar button. If you have not activated the WEBENCH Altium Connector it will ask you activate.

2. It will open simulation settings UI. Analysis setup window contains mainly of three parts.

    1. Enable Analysis/Options: These options allow to enable/disable the required analysis. Currently AC, DC and Transient simulations are available. Global parameters and advanced options can also be edited here.

    2. Data Collection, Viewing and Netlisting: These options enable user to control netlisting, data saving and Sim View setup options.

    3. Signal Selection: The active signals can be selected from a list of available signals. Active signals are plotted when the simulation is running.

3. If you want to make changes to the settings, click on respective analysis name on the left pane and edit the options.

4. If you want to specify some simulation parameter, it can be defined in the Global Parameter options.

5. The project is ready for simulation. Click on OK to run simulation. It will start simulation and a plot window will be opened.

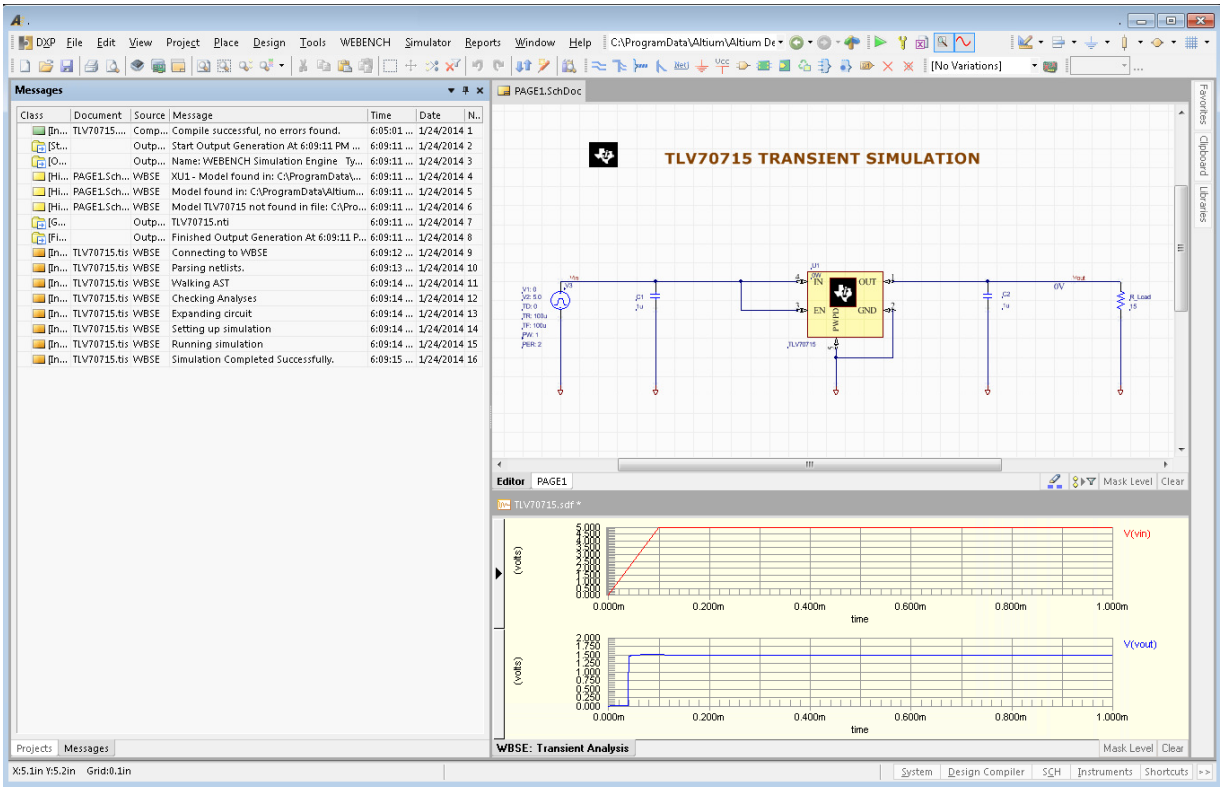

WBSE Model Encryption:

- WBSE Encrypted Library for the component is supported.
- The above example is provided with your installation of this extension and can be found in <WEBENCH Extension Installation Dir>\WBSE\Examples directory of your system.

The example uses WBSE encrypted model.

Exporting Design from WEBENCH® Designer:

In order to export a design, first open a design in WEBENCH (e.g. TPS62130).

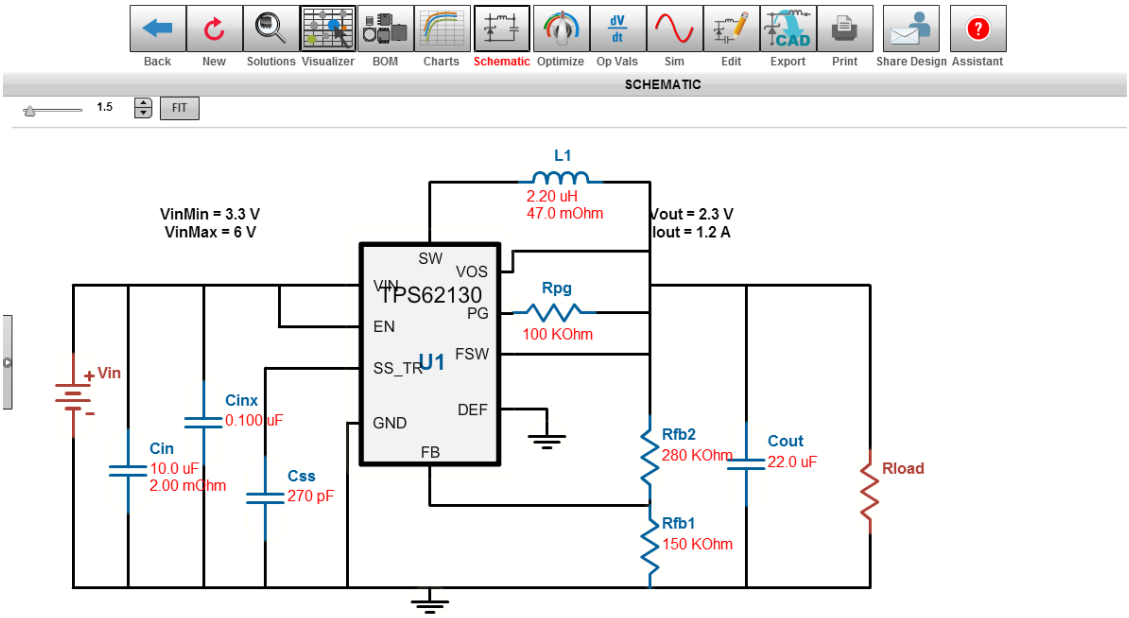

Click on CAD export button and choose Altium Designer in Simulation Export panel.

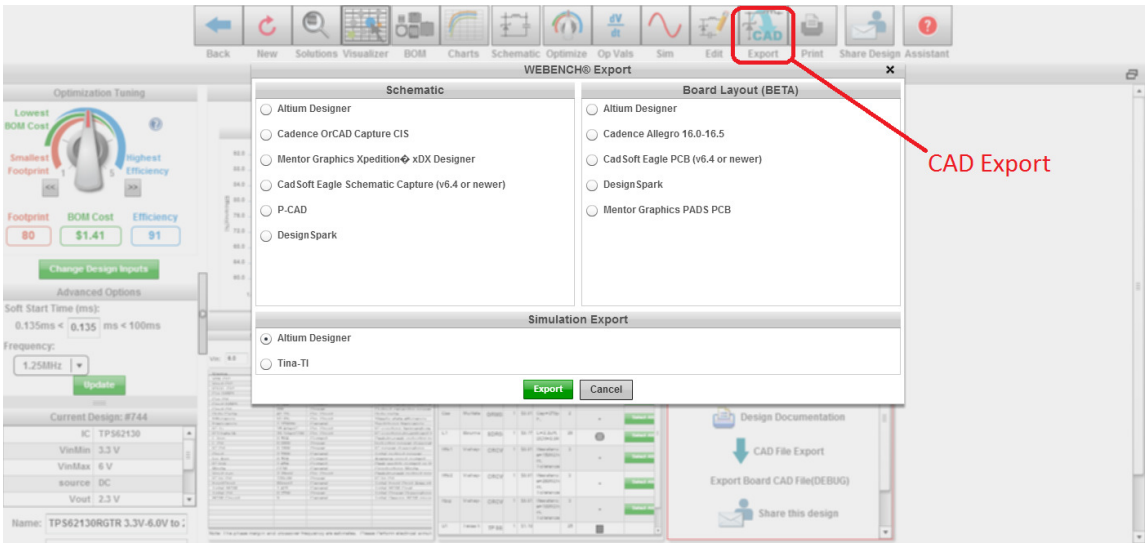

Click on Export to download simulation export file. On successful completion of export process, click on download file and save the simulation xml.

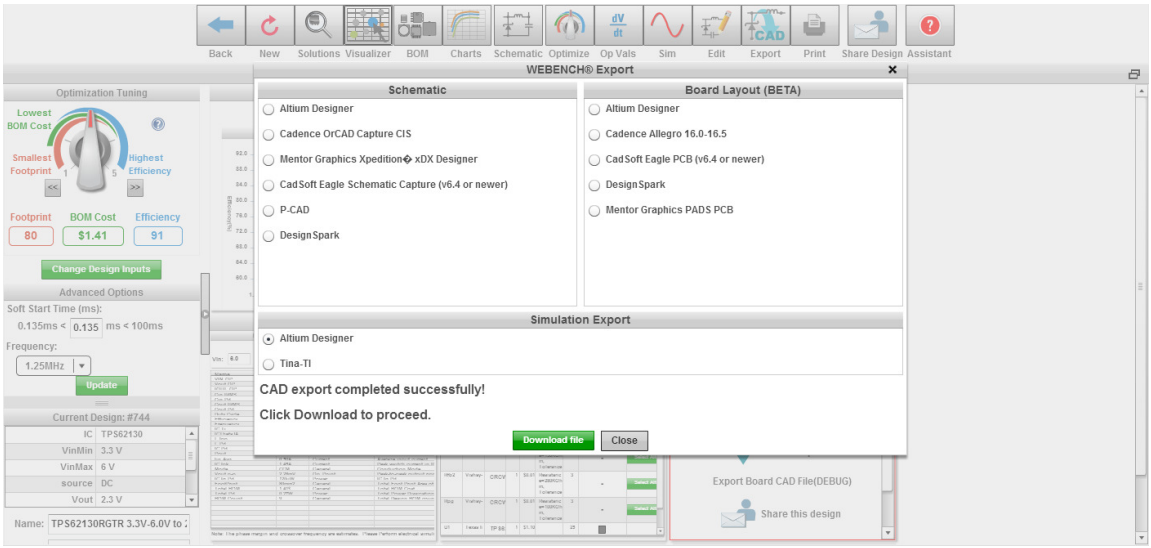

Open the design in Altium using **Open WEBENCH Design** from **WEBENCH** menu bar. You can simulate design using WEBENCH Simulation Engine.

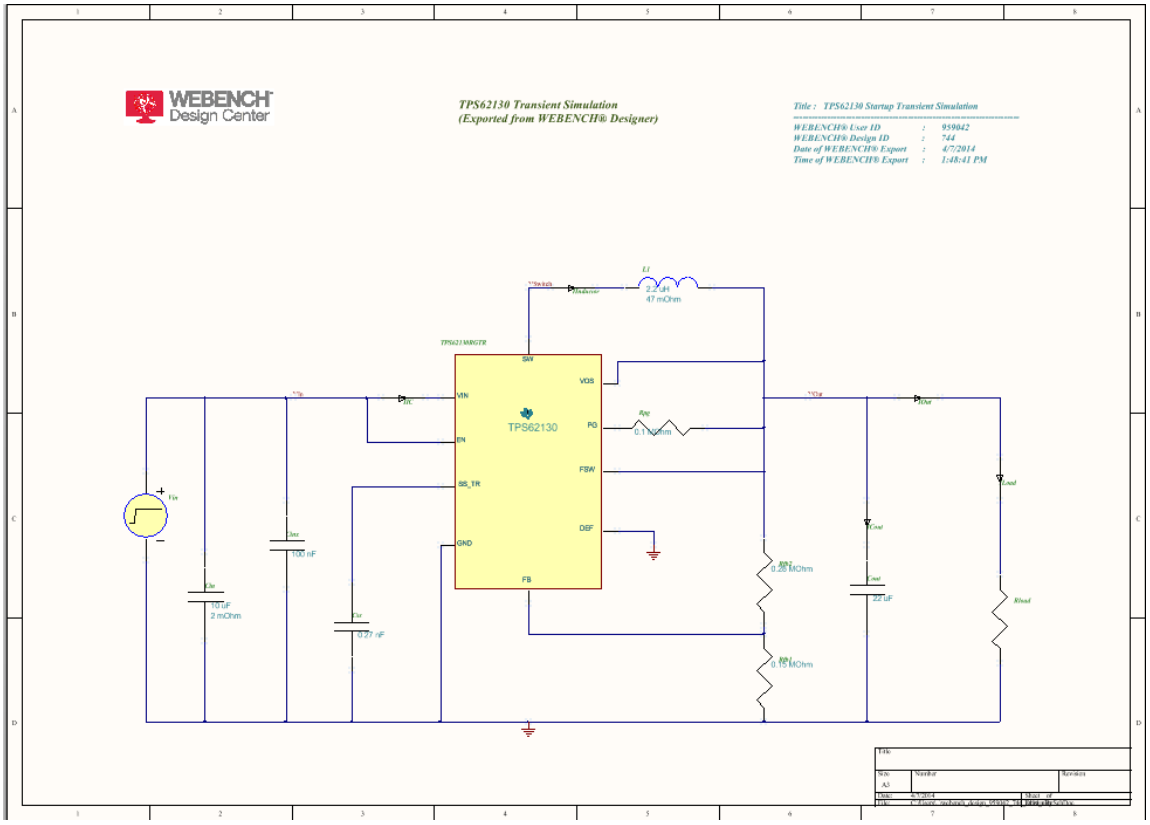

Altium Simulation Export Enabled Power Designer Parts

Enabling simulation export requires a lot of validation and therefore currently it is enabled only for selected set of power designer parts. We have been validating more parts on weekly basis and enabling them for Simulation export therefore revisit WEBENCH if you don't find a part which is enabled for Simulation export.

Exporting a Filter Designer Part:

From WEBENCH menu in Altium Click on WEBENCH Filter Designer to launch Filter Designer.

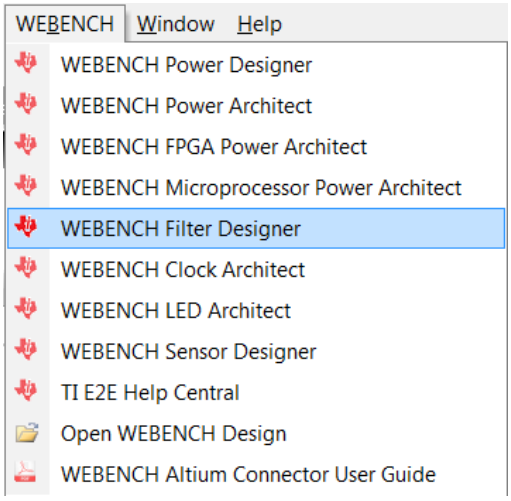

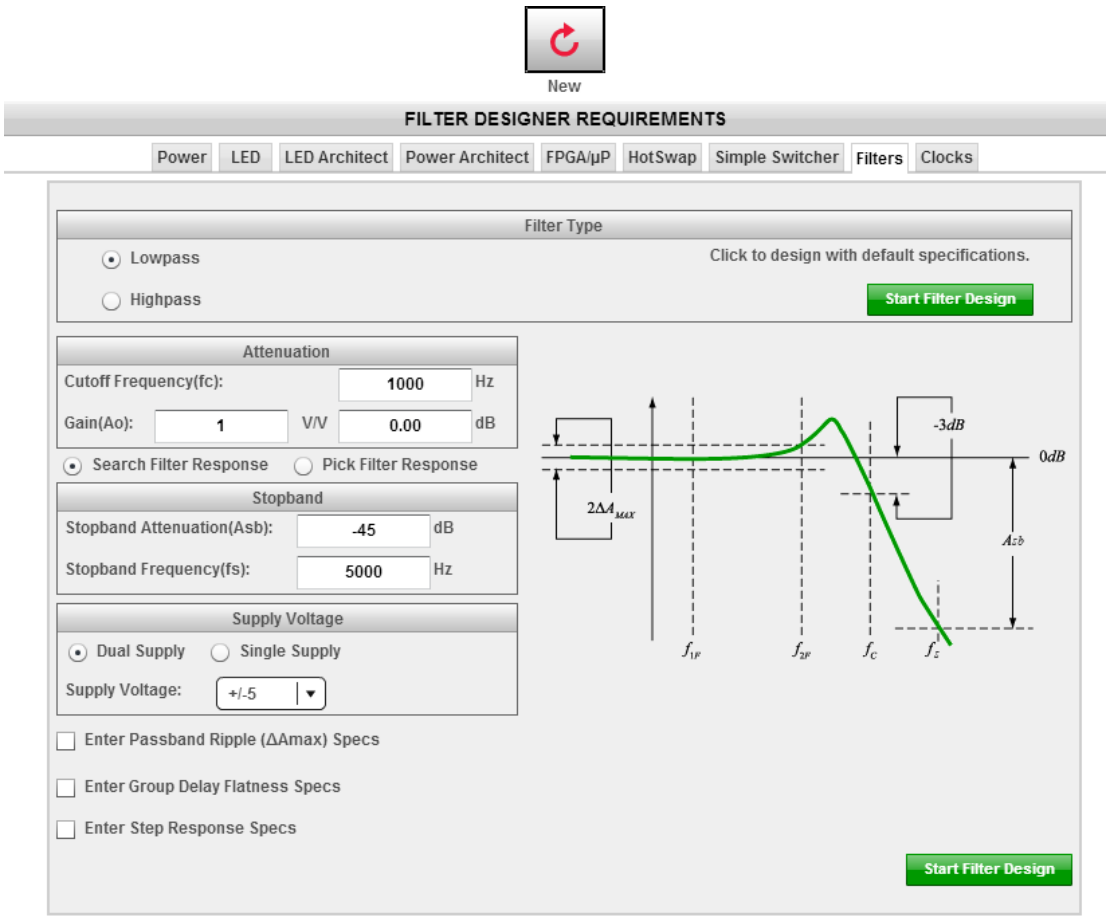

Next choose the Filter type and click on Start Filter Design.

You will see following in Altium: Choose the Filter type. (Say Butterworth)

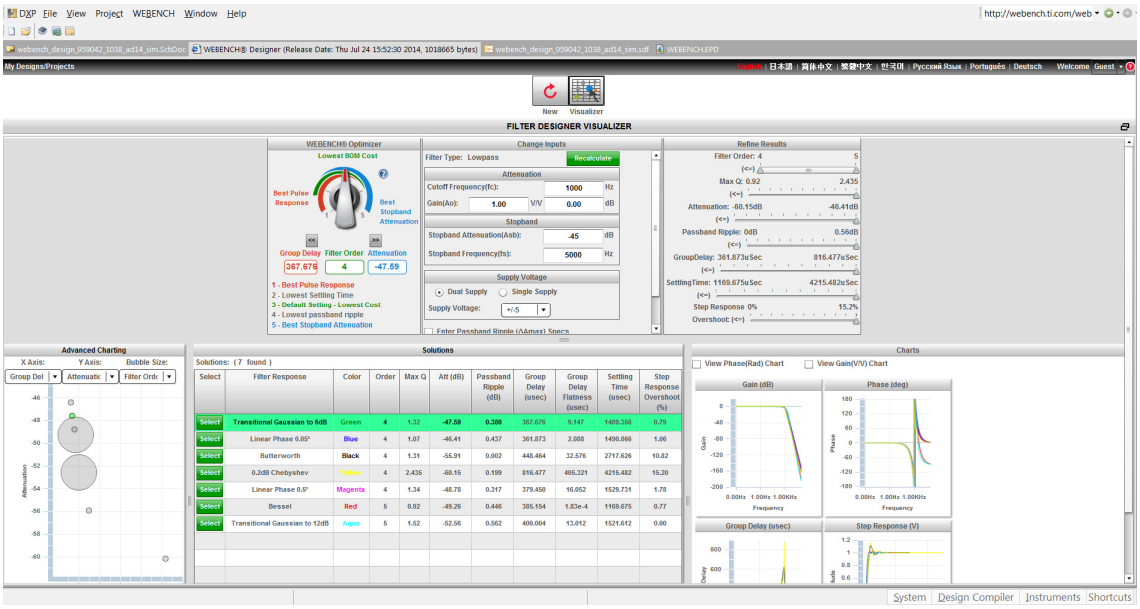

It may ask to login if you are not already signed in WEBENCH.

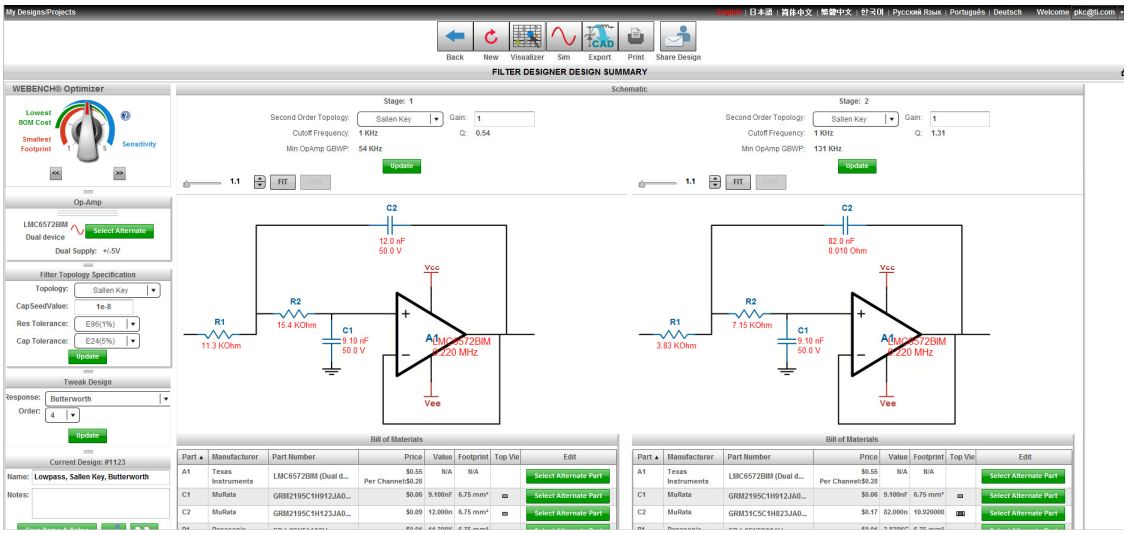

From Navigation Bar Click on Export and you will see WEBENCH Export Dialog box.

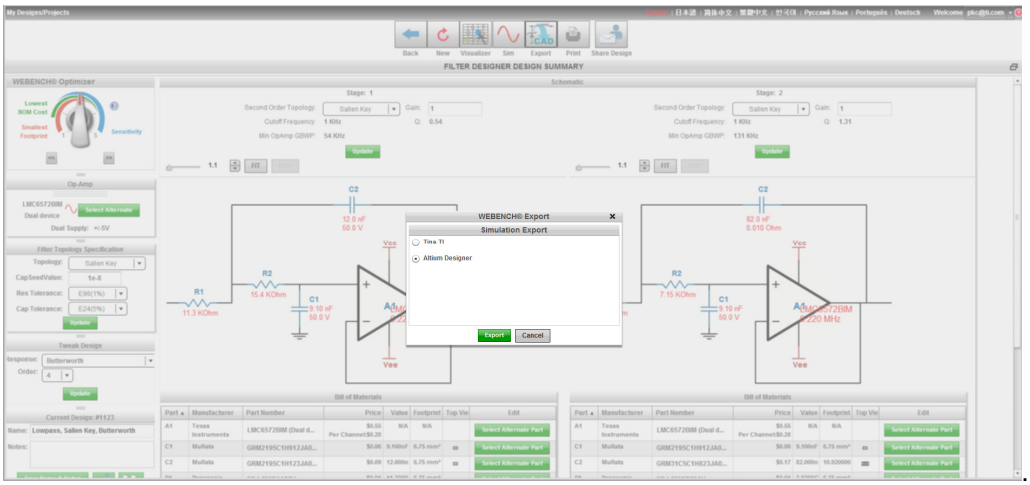

In WEBENCH Export Dialog box select the Altium Designer radio button and click on export to download the design in Altium. Open the downloaded design in the Altium as explained above for Power Designer and simulate it in Altium Designer.

Support

For reporting bugs or any other help regarding WEBENCH® Altium Connector please post your queries to WEBENCH Design Center in TI E2E forum from WEBENCH Menu.

WEBENCH® Simulation Engine Reference Guide

Introduction to WBSE

WEBENCH® Simulation Engine [WBSE] is a general-purpose circuit simulation program that analyzes electronic circuits using direct-method circuit simulation techniques. These techniques provide precise waveforms for voltages, currents, and charges in the circuit.

WBSE simulates circuits containing a range of devices, including:
• Resistors
• Capacitors
• Inductors and mutual inductance
• A variety of independent and dependent voltage and current sources
• Lossy and lossless transmission lines

Range of non-linear devices include:
• Bipolar junction transistors
• Junction field-effect transistors
• MOS field-effect transistors

WBSE uses built-in models for these non-linear semiconductor devices and you need to specify only the pertinent model parameters.

WBSE requires at least one file as input. The input file should contain the circuit description in the form of a netlist of primitive circuit components, the models used for all non-linear devices in the circuit, the analyses that need to be performed on the circuit, the options to be used for the analyses, and finally the outputs that need to be saved.

Overview

Overview

Analyses performed by WEBENCH® Simulation Engine [WBSE] can be grouped into 3 domains:

• **DC domain**

These analyses compute the stable dc state of the circuit. All device parameters are computed first. Next, WBSE performs iterations to propagate the dc values of all independent sources in the circuit to all other nodes and devices in the circuit. Iterations continue until a steady-state is achieved. In the steady state, voltage on nodes, charge on capacitors, flux in inductors, and currents through resistors become constants.

DC domain analyses include:

- **OP : operating point** analysis
- **DC : dc transfer curve** analysis

• **Time domain**

In time domain, WBSE first computes the time=0 steady state solution. Then 'time' is increased and the value of time-varying independent sources change. As a result, node voltages change, capacitors charge or discharge, and currents through devices change. WBSE takes appropriately small time-steps and re-computes the stable state. This process is repeated until the end of the time-domain simulation.

Time domain analysis includes:

- **TRAN : transient** analysis

• **Small-Signal Frequency domain**

These analyses work on a stable operating point of the circuit. At the operating point, WBSE generates the linearized small-signal model of the circuit. In small-signal frequency domain, the circuit's behavior is analyzed at different real or complex frequencies.

Frequency domain analyses include:

- **AC : ac** analysis

The operating point for small-signal analyses can either be a stable dc solution where all independent sources are set to their "dc" values, or it can be a converged time-point solution during a transient analysis, where all time-varying independent sources are set to their time values.

Overview: Transient Analysis

TRAN : Transient analysis

A **transient** analysis performs a time-domain analysis of your circuit over a specified time interval. Before starting the transient analysis, WBSE computes the operating point of the circuit using the time=0 values of all independent sources that have a time function. Other independent sources get their **dc** values at time=0. This is an operating point analysis that results in an "**initial transient**" solution of the circuit. After the time=0 solution is obtained, WBSE starts to increment '**time**' in steps. The voltages of all time dependent sources are updated. Capacitive components in the circuit are allowed to charge and discharge, and flux through inductors is allowed to change. Currents through devices can change. WBSE recomputes the solution of the circuit at the new time-point. It does so by starting from the previous timepoint solution. The process repeats until time reaches the specified stop time for the transient analysis.

Time-stepping

WBSE can take a fixed-time step for the entire transient analysis. More commonly, WBSE computes a new time-step size at every time-point. The step-size is based on circuit characteristics, and the rate of change of voltages and currents in the circuit.

Accuracy

Accuracy parameter settings also determine the time-step size. Loser error tolerance settings will make WBSE take bigger time-steps. This will finish the transient simulation sooner at the cost of inaccuracies in the results. Tighter error tolerances will keep the time-steps smaller. The results will then be more accurate at the cost of longer run times.

Transient Analysis Parameters

Simulation Time & Interval Parameters

TSTEP
Defines the time-step size for fixed time-step controlling methods. It may also be used as default values of some parameters on some independent sources. An example is the rise-time of a pulse source.

TSTART
If the waveform output of a transient analysis is not interesting from time=0 to a certain time value, the size of the waveform files written by WBSE can be reduced by setting TSTART to the time value from which you want to see the waveforms. This does not save simulation time, because the transient analysis always starts from time=0.

TSTOP
Stop time value at which transient analysis stops.

TMAX
For variable time-step methods step-size can become large if there is no activity in the circuit. Specifying TMAX will not allow WBSE to take a step-size larger than that value. The default (**1/20$_{th}$ of TSTOP**) can be too large for oscillator circuits. For accurate results on such circuits, be sure to set TMAX to no more than 1/20$_{th}$ of the period of oscillation.

TRES
Certain devices can cause discontinuous events at their output during a transient analysis. Discontinuous events include instantaneous switching. PWL and math expression types of controlled sources can exhibit such behavior. Truncation error becomes large when this happens, and it can make WBSE take very small time-steps. Reducing time-step to **TMIN** to locate the exact corner and recovering to larger time-steps can be inefficient. **TRES** allows you to set a higher threshold than **TMIN** to resolve such transitions.

Usually **TRES** is significantly larger than **TMIN**.

Accuracy & Convergence Parameters

LTERATIO

Local truncation error (LTE) is the error in integration over time. This represents the difference between the computed solution and the predicted solution derived from an extrapolation of the solutions at the previous few time points. LTE needs to be controlled in a transient analysis to avoid inaccuracies in results due to very large time-steps.

Tolerance for LTE, or Tolerance$_{LTE}$ is defined as a constant multiple of Tolerance NR:

LTERATIO = Tolerance LTE / Tolerance NR

RELTOL and ABSTOL parameters control the accuracy of the solution to within the specified tolerance at any given time. This tolerance is called the Newton-Raphson tolerance, or $Tolerance_{NR}$. It is defined by the equation:

$$ToleranceNR = ABSTOL + RELTOL \times REF$$

In other words, **LTERATIO** is defined as: To reduce LTE, while keeping error tolerance for voltages and currents the same, you can make LTERATIO smaller. To reduce them both, you can make RELTOL and/or ABSTOL smaller. If you make RELTOL and/or ABSTOL larger, and want to maintain the same LTE tolerance, you will also need to decrease LTERATIO.

MAXITERS

WBSE usually takes less than 3 iterations to converge at any time point > 0. If 'MAXITERS' iterations are reached without convergence at any time-point, the time-step size will be reduced and convergence attempted again at an earlier time point. In other words, the transient analysis backs up. Backups due to reaching this iteration limit usually indicates other problems in the circuit or models.

MAX_LIMITING_ITERS

Maximum iteration allowed during transient with devices enter limiting mode, default value is 200.

UIC

This parameter tells WBSE to bypass the traditional "initial transient convergence" flow and just use the provided "**Initial Conditions**" as the time=0 solution. The **IT** values, if specified, are ignored. If not used carefully, 'UIC" can cause serious non-convergence problems at the first time point of the transient analysis. This is especially true if, at the very first time point, voltages in the circuit have sharp changes from zero or the initial conditions provided.

Overview: AC Analysis

AC : AC analysis

An **ac** analysis determines the response of a linearized small-signal model of your circuit, to the frequency of 'ac' sources in your circuit. Typically, in an **ac** analysis, you sweep the frequency of the ac sources while your circuit is biased at the same operating point. WBSE allows you to sweep other variables as well in an ac analysis.

Prerequisites for AC analysis

To perform an **ac** analysis, there should be at least one independent "ac" source in the circuit. If there are multiple "ac" sources, WBSE will write a warning but continue the simulation. The effect will be a superposition of all the ac sources in the circuit.

AC Analysis Parameters

POINTS

Number of points through the AC sweep. Definition depends on TYPE of SWEEP.

SWEEP TYPE

Types of Sweep:
LINEAR - Linear. Size will be "(stop-start)/(points-1)".
DECADE - Logarithmic by octaves. Points specified are per decade.
OCTAVE - Logarithmic by decades. points specified are per octave.

START FREQ

Start value of frequency sweep.

STOP FREQ

Stop value of frequency sweep

Overview: DC Analysis

DC : DC analysis

A **dc** analysis determines a series of dc solutions of the circuit while one or more circuit variables are swept. Originally, as the name implies, this analysis was designed to sweep the dc value of an independent voltage or current source and watch the circuit response.

WBSE computes the dc solution at the first point of the sweep variable(s) starting from zero or the specified initial conditions. All subsequent points of the sweeps are solved by taking the previous solution as the initial guess. The assumption here is that the step size of the sweep is small and so the solution will change very slightly. Two situations invalidate this assumption. First is the case of nested sweeps when the inner loop variable switches back to its starting value while the outer loop variable takes the next step. The second case is when the circuit switches states very abruptly due to high gains of some circuit components. Default iteration count limits, and step sizes can be adjusted to solve non-convergence problems that such situations can cause.

DC Analysis Parameters

POINTS

Number of points through the DC sweep. Definition depends on TYPE of SWEEP.

SWEEP TYPE

Types of Sweep:
LINEAR - Linear. Size will be "(stop-start)/(points-1)".
DECADE - Logarithmic by octaves. Points specified are per decade.
OCTAVE - Logarithmic by decades. points specified are per octave.

SWEEP VARIABLE

Name of the variable to be swept.

START VALUE

Start value of sweep variable.

STOP VALUE

Stop value of sweep variable.

Tolerance Parameters

Tolerance parameters control the accuracy of a computed value while iterating to a converged solution. In other words, they limit the error to within the desired tolerance for accuracy. These parameters are optional and can be specified on all of the analyses described above. Accuracy parameters are described in the table below.

The equation that uses these parameters to compare two values, **Val_1** and **Val_2** of a variable is:

$$|Val_1 - Val_2| <= ABSTOL + RELTOL \times \min(|Val_1|, |Val_2|)$$

Here **ABSTOL** (=**VABSTOL** for voltages or **IABSTOL** for currents) is the "**absolute**" error component of the error. **RELTOL** is the "**relative**" error component.

RELTOL
Default=**1e-3**
Relative error tolerance.

VABSTOL
Default=**1e-6**
Absolute voltage error tolerance.

IABSTOL
Default=**1e-9**
Absolute current error tolerance.

GMIN
Default=**1e-12 mhos**
This option sets the minimum conductance value allowed for any of the elements in your circuit. A gmin conductance between a pair of nodes in the circuit is "nearly" an open circuit. The current through this conductance should be several orders of magnitude smaller than other currents through those nodes. Generally a gmin conductance should not change your simulation results. If there are real conductances in your circuit that are close to gmin, you can reduce the value of this option.

Model Convergence Options

CHECK_DCMAX

Default=**true**
If set to "**false**", this option turns off the checking of currents and voltages at a **dc** operating point against the values of CURMAX **(**Default=1 amp) and VOLTMAX (Default=1 amp) options.

TRAN_LIMITING

Default=**false**
Enable device limiting during the transient, critical for behavior model or control source with abrupt transitions.

OPTSTEP

Default=**off**
Enable TI proprietary optimal time-stepping algorithm (still in beta).

Supported Devices

List of devices that are supported by WEBENCH® Simulation Engine

- Bipolar Junction transistor
- Capacitor
- Voltage-controlled voltage source
- Voltage-controlled current source
- Current-controlled current source
- Current-controlled voltage source
- Diode
- Independent current source
- Independent voltage source
- Inductor
- Mutual Inductor
- Junction FET
- MOSFET
- Resistor
- Subcircuit instantiation
- Transmission line
- Voltage controlled switch

IMPORTANT NOTICE

Texas Instruments Incorporated and its subsidiaries (TI) reserve the right to make corrections, enhancements, improvements and other changes to its semiconductor products and services per JESD46, latest issue, and to discontinue any product or service per JESD48, latest issue. Buyers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All semiconductor products (also referred to herein as "components") are sold subject to TI's terms and conditions of sale supplied at the time of order acknowledgment.

TI warrants performance of its components to the specifications applicable at the time of sale, in accordance with the warranty in TI's terms and conditions of sale of semiconductor products. Testing and other quality control techniques are used to the extent TI deems necessary to support this warranty. Except where mandated by applicable law, testing of all parameters of each component is not necessarily performed.

TI assumes no liability for applications assistance or the design of Buyers' products. Buyers are responsible for their products and applications using TI components. To minimize the risks associated with Buyers' products and applications, Buyers should provide adequate design and operating safeguards.

TI does not warrant or represent that any license, either express or implied, is granted under any patent right, copyright, mask work right, or other intellectual property right relating to any combination, machine, or process in which TI components or services are used. Information published by TI regarding third-party products or services does not constitute a license to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

Reproduction of significant portions of TI information in TI data books or data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. TI is not responsible or liable for such altered documentation. Information of third parties may be subject to additional restrictions.

Resale of TI components or services with statements different from or beyond the parameters stated by TI for that component or service voids all express and any implied warranties for the associated TI component or service and is an unfair and deceptive business practice. TI is not responsible or liable for any such statements.

Buyer acknowledges and agrees that it is solely responsible for compliance with all legal, regulatory and safety-related requirements concerning its products, and any use of TI components in its applications, notwithstanding any applications-related information or support that may be provided by TI. Buyer represents and agrees that it has all the necessary expertise to create and implement safeguards which anticipate dangerous consequences of failures, monitor failures and their consequences, lessen the likelihood of failures that might cause harm and take appropriate remedial actions. Buyer will fully indemnify TI and its representatives against any damages arising out of the use of any TI components in safety-critical applications.

In some cases, TI components may be promoted specifically to facilitate safety-related applications. With such components, TI's goal is to help enable customers to design and create their own end-product solutions that meet applicable functional safety standards and requirements. Nonetheless, such components are subject to these terms.

No TI components are authorized for use in FDA Class III (or similar life-critical medical equipment) unless authorized officers of the parties have executed a special agreement specifically governing such use.

Only those TI components which TI has specifically designated as military grade or "enhanced plastic" are designed and intended for use in military/aerospace applications or environments. Buyer acknowledges and agrees that any military or aerospace use of TI components which have ***not*** been so designated is solely at the Buyer's risk, and that Buyer is solely responsible for compliance with all legal and regulatory requirements in connection with such use.

TI has specifically designated certain components as meeting ISO/TS16949 requirements, mainly for automotive use. In any case of use of non-designated products, TI will not be responsible for any failure to meet ISO/TS16949.

Products		**Applications**	
Audio	www.ti.com/audio	Automotive & Transportation	www.ti.com/automotive
Amplifiers	amplifier.ti.com	Communications & Telecom	www.ti.com/communications
Data Converters	dataconverter.ti.com	Computers & Peripherals	www.ti.com/computers
DLP® Products	www.dlp.com	Consumer Electronics	www.ti.com/consumer-apps
DSP	dsp.ti.com	Energy and Lighting	www.ti.com/energyapps
Clocks and Timers	www.ti.com/clocks	Industrial	www.ti.com/industrial
Interface	interface.ti.com	Medical	www.ti.com/medical
Logic	logic.ti.com	Security	www.ti.com/security
Power Mgmt	power.ti.com	Space, Avionics & Defense	www.ti.com/space-avionics-defense
Microcontrollers	microcontroller.ti.com	Video & Imaging	www.ti.com/video
RFID	www.ti-rfid.com		
OMAP Applications Processors	www.ti.com/omap	**TI E2E Community**	e2e.ti.com
Wireless Connectivity	www.ti.com/wirelessconnectivity		

Mailing Address: Texas Instruments, Post Office Box 655303,
Dallas, Texas 75265 Copyright© 2014, Texas Instruments
Incorporated